

[AN034]



ADVANCED
NETWORK DEVICES

AND Device Temperature Sensors

Version 2.0

9/5/2017

© 2017 ADVANCED NETWORK DEVICES

3820 NORTH VENTURA DR.

ARLINGTON HEIGHTS, IL 60004

U.S.A

ALL RIGHTS RESERVED

PROPRIETARY NOTICE AND LIABILITY DISCLAIMER

The information disclosed in this document, including all designs and related materials, is the valuable property of Digital Advanced Network Devices and/or its licensors. Advanced Network Devices and/or its licensors, as appropriate, reserve all patent, copyright and other proprietary rights to this document, including all design, manufacturing, reproduction, use, and sales rights thereto, except to the extent said rights are expressly granted to others.

The Advanced Network Devices product(s) discussed in this document are warranted in accordance with the terms of the Warranty Statement accompanying each product. However, actual performance of each product is dependent upon factors such as system configuration, customer data, and operator control. Since implementation by customers of each product may vary, the suitability of specific product configurations and applications must be determined by the customer and is not warranted by Advanced Network Devices.

To allow for design and specification improvements, the information in this document is subject to change at any time, without notice. Reproduction of this document or portions thereof without prior written approval of Advanced Network Devices is prohibited.

Static Electric Warning



TROUBLESHOOTING AND ADDITIONAL RESOURCES

Complete Support Site with User Guides & Help: <http://www.anetdsupport.com/>
Additional App Notes: <http://www.anetdsupport.com/AppNotes>
Customer Feedback Survey: <http://www.anetdsupport.com/survey>
AND Legal Disclaimer: <http://www.anetd.com/legal>

OVERVIEW

AND devices come equipped with several temperature sensors:

- The main controller board has one digital temperature sensor in its corner, U13.
- One or two display boards may connect to the main controller board. Each display board comes with an on-board digital temperature sensor in its corner, U14.
- The display board also includes a connector, J9, to which may attach an analog sensor -- either a thermistor used to measure remote temperatures, or a standard rheostat (variable resistor).

IP TEMPERATURE CHECK SETTINGS

On the web page interface, go to **Device Settings** → **Peripherals** for the *Temperature Check Settings* section (see below).

Temperature Check Settings help		
Parameter	Stored value	New Value
Controller Description		
Controller Temperature High (°F)		<input type="text"/>
Send SNMP Trap on Controller Temperature High	No	No ▼
Controller Temperature Low (°F)		<input type="text"/>
Send SNMP Trap on Controller Temperature Low	No	No ▼
Display Description		
Display Temperature High (°F)		<input type="text"/>
Send SNMP Trap on Display Temperature High	No	No ▼
Display Temperature Low (°F)		<input type="text"/>
Send SNMP Trap on Display Temperature Low	No	No ▼
Thermistor/Rheostat Description		
Thermistor/Rheostat Type	US Sensor 10k Thermistor	Type: US Sensor 10k Thermistor ▼ Parametric R: <input type="text" value="10000"/> Beta: <input type="text" value="3950"/>
Thermistor/Rheostat High Level (°F; or % for rheostat)		<input type="text"/>
Send SNMP Trap on Thermistor/Rheostat Value High	No	No ▼
Thermistor/Rheostat Low Level (°F; or % for rheostat)		<input type="text"/>
Send SNMP Trap on Thermistor/Rheostat Value Low	No	No ▼
Rheostat Change Level (%; for rheostat only)		<input type="text"/>
Send SNMP Trap on Rheostat Value Change	No	No ▼
Thermistor/Rheostat 2 Description		
Thermistor/Rheostat 2 Type	US Sensor 10k Thermistor	Type: US Sensor 10k Thermistor ▼ Parametric R: <input type="text" value="10000"/> Beta: <input type="text" value="3950"/>
Thermistor/Rheostat 2 High Level (°F; or % for rheostat)		<input type="text"/>
Send SNMP Trap on Thermistor/Rheostat 2 Value High	No	No ▼
Thermistor/Rheostat 2 Low Level (°F; or % for rheostat)		<input type="text"/>
Send SNMP Trap on Thermistor/Rheostat 2 Value Low	No	No ▼
Rheostat 2 Change Level (%; for rheostat only)		<input type="text"/>
Send SNMP Trap on Rheostat 2 Value Change	No	No ▼

POSSIBLE CONFIGURATIONS

Configuration	Controller	Display	Temp / Rheostat 1	Temp / Rheostat 2	SNMP Report
Controller Only / No Display	Controller Board U13 Reported in SNMP Temp Sensor 1	Not Used	Not Used	Not Used	1 Temp Sensor 0 Rheostats
Controller Plus Single Display	Controller Board U13 Reported in SNMP Temp Sensor 1	Display Board U14 Reported in SNMP Temp Sensor 2	Display Board's Thermistor / Rheostat Connector Reported in SNMP Temp Sensor 3 if a Temp Sensor, or Rheostat 1 if a Rheostat	Not Used	3 Temp Sensors 1 Rheostats
Controller Plus 2 Displays / "Double Wide" Configuration (Connector "Display 0" connects to the left display and "Display 1" connects to the right display)	Controller Board U13 Reported in SNMP Temp Sensor 1	U14 on Right Display Board (Connected to "Display 1" Connector) Reported in SNMP Temp Sensor 2	Thermistor / Rheostat Connector for Display Board Connected to "Display 0" Connector (the left display) Reported in SNMP Temp Sensor 3 (for Temp Sensor) or Rheostat 1 (for Rheostat)	Thermistor / Rheostat Connector for Display Board Connected to "Display 1" Connector (the right display) Reported in SNMP Temp Sensor 3 (for Temp Sensor) or Rheostat 2 (for Rheostat)	4 Temp Sensors 2 Rheostats
Controller Plus 2 Displays / "Double Sided" Configuration (Both displays show the identical content at all times)	Controller Board U13 Reported in SNMP Temp Sensor 1	U14 on Display Board (Connected to Controller Connector "Display 0") Reported in SNMP Temp Sensor 2	Thermistor / Rheostat Connector for Display Board Connected to "Display 0" Connector Reported in SNMP Temp Sensor 3 (for Temp Sensor) or Rheostat 1 (for Rheostat)	Thermistor / Rheostat Connector for Display Board Connected to "Display 1" Connector Reported in SNMP Temp Sensor 3 (for Temp Sensor) or Rheostat 2 (for Rheostat)	4 Temp Sensors 2 Rheostats