

[AN004]



ADVANCED
NETWORK DEVICES

IPClockWise: GPIO Callback

Version 2.0

9/11/2017

© 2017 ADVANCED NETWORK DEVICES

3820 NORTH VENTURA DR.

ARLINGTON HEIGHTS, IL 60004

U.S.A

ALL RIGHTS RESERVED

PROPRIETARY NOTICE AND LIABILITY DISCLAIMER

The information disclosed in this document, including all designs and related materials, is the valuable property of Digital Advanced Network Devices and/or its licensors. Advanced Network Devices and/or its licensors, as appropriate, reserve all patent, copyright and other proprietary rights to this document, including all design, manufacturing, reproduction, use, and sales rights thereto, except to the extent said rights are expressly granted to others.

The Advanced Network Devices product(s) discussed in this document are warranted in accordance with the terms of the Warranty Statement accompanying each product. However, actual performance of each product is dependent upon factors such as system configuration, customer data, and operator control. Since implementation by customers of each product may vary, the suitability of specific product configurations and applications must be determined by the customer and is not warranted by Advanced Network Devices.

To allow for design and specification improvements, the information in this document is subject to change at any time, without notice. Reproduction of this document or portions thereof without prior written approval of Advanced Network Devices is prohibited.

Static Electric Warning



TROUBLESHOOTING AND ADDITIONAL RESOURCES

Complete Support Site with User Guides & Help: <http://www.anetdsupport.com/>
Additional App Notes: <http://www.anetdsupport.com/AppNotes>
Customer Feedback Survey: <http://www.anetdsupport.com/survey>
AND Legal Disclaimer: <http://www.anetd.com/legal>

SETTING UP GPIO EVENTS IN IPCLOCKWISE

1. Get the IP address of the PC running IPClockWise. In Windows, run *ipconfig* from a command prompt to list the address.
2. Power up the AND device with the GPIO input that will be monitored.
3. Configure the device to point to the PC running IPClockWise.

To configure the device using onboard settings, access the web page for the device:


- Select **Device Settings** → **Servers**.
- Locate the GPIO Callback URL, and set it to *http://10.10.3.4:8089/* where *10.10.3.4* is your PC's IP address (obtained in step 1).

GPIO Callback URL help	
Stored Value	http://10.10.3.4:8089/
New Value	<input type="text" value="http://10.10.3.4:8089/"/>

To configure the device using a configuration file, add the following tag, where *10.10.3.4* is the IP address of your PC (obtained in step 1):


```
<GPIO_callback url="http://10.10.3.4:8089/" min_update_period_ms="250" />
```

4. Save the settings, and reboot the device.
5. In IPClockWise, under the *Alerts* tab, select *Add an Alert*.
6. In the Trigger section, select "GPIO In" as the *Source*. Set the *Channel or sub-type* to "0" or "1" for monitoring GPIO Input 0 or 1, respectively. Set the *State* to "Set" to look for the input going active.

Trigger	Source	Channel or sub-type	State	Extra Action
	GPIO In	0	Set	None

7. OPTIONAL STEP

You can select an extra action in the *Trigger* Section. For example, if *Intercom* is selected for a push button-equipped speaker, IPClockWise will sound an alert in the Intercom Call Waiting tab of the Live Sound tab when the button is pressed. This action will alert the IPClockWise attendant of an intercom call request. The attendant can then respond to the request by double-clicking on the device in the call waiting list.

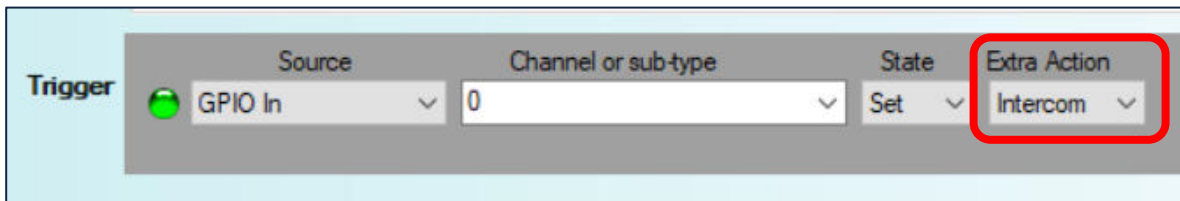

8. Check the checkbox next to the device with the monitored GPIO input in the *GPIO Listen for Trigger Source* list at the bottom of the screen.

	Endpoint	Location	IP Address	Flashers	Inputs	Outputs	Display	
Listen for trigger source	<input type="checkbox"/>	Ceiling: Mens Bathroom.	1N	10.10.6.145	-	0,0	0,0	no
	<input checked="" type="checkbox"/>	Brian IPBTN		10.10.7.91	-	0,0	0,0	no
	<input type="checkbox"/>	Ceiling: Men's Bathro...	1S	10.10.6.28	-	0,0	0,0	no
	<input type="checkbox"/>	Marge's Desk		10.10.6.123	-	1,0	0,0	yes
	<input type="checkbox"/>	Ceiling: #4	2S	10.10.6.159	-	0,0	0,0	no
	<input type="checkbox"/>	Gary Gen3 Test		10.10.6.120	-	0,0	0,0	no

9. Fill out the remaining details of the Alert, such as a scrolling message and audio file, as well as the devices to receive the alert in the *Output Devices* list.

Custom Stream:		None		Uncheck All	Check All			
	Endpoint	Location	IP Address	Flashers	Inputs	Outputs	Display	
Output devices	<input type="checkbox"/>	Ceiling: Men's Bathro...	1S	10.10.6.28	-	0,0	0,0	no
	<input type="checkbox"/>	Marge's Desk		10.10.6.123	-	1,0	0,0	yes
	<input type="checkbox"/>	Ceiling: #4	2S	10.10.6.159	-	0,0	0,0	no
	<input type="checkbox"/>	Gary Gen3 Test		10.10.6.120	-	0,0	0,0	no
	<input checked="" type="checkbox"/>	IPSpeaker 2046f90a000b		10.10.6.137	-	0,0	0,0	no
	<input type="checkbox"/>	IPSpeaker 2046f90a000a		10.10.6.48	-	0,0	0,0	no
	<input type="checkbox"/>	IP Camera Lobby	1 - Atrium	10.10.6.95	yes	0,0	0,0	yes
	<input type="checkbox"/>	Demo 07 IPSWD-RWB	Demo Room	10.10.7.12	yes	0,0	0,0	yes

10. Select *OK* to save the Alert.

IPClockWise will now respond to the GPIO input as configured.